

Good Night Brite™




INSTRUCTIONS

Thank you for your purchase! Good Night Brite™ are the fun pop up tents that give your child their own private light show at night! Good Night Brite™ make bedtime fun!


Good Night Brite™ are easy to set up and easy to store. They instantly pop open and they fasten to the bed in just minutes. They work on all twin beds, even bunk beds! To store them, simply follow our easy folding instructions.

CAUTION: Adult Assembly required. BE SURE TO REMOVE FROM PACKAGING CAREFULLY. This structure uses a tension rod which will pop open quickly. Caution must be used when handling this product. Small children must never be allowed to fold or unfold the item. Do not place heavy objects on this product. Discard if tension rod is broken or if product is damaged. This item is meant for twin size mattresses. Do not attempt to install on other mattress sizes.


INCLUDED:

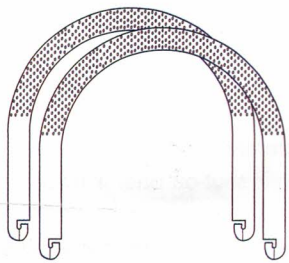


U-Shape Connectors (2)

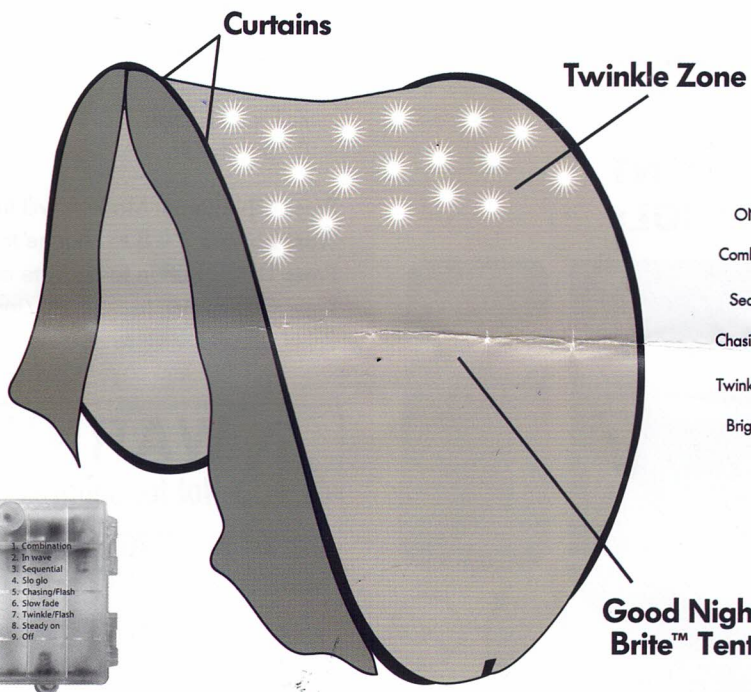

Battery Compartment
(Batteries Not Included)

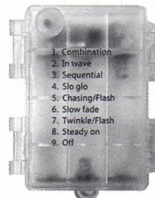


Remote Control (Battery Included)

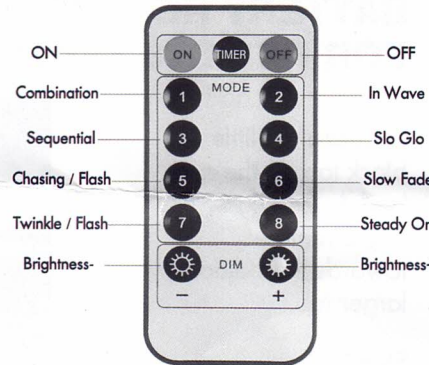

SETUP:


CAUTION: Adult assembly required by a person over the age of 18.

1. Start at the pillow-end of the mattress. Lift mattress and slide rounded end of U-Shape Connector under, being sure snap-in slots are angled up as shown. Repeat for other side. (See Fig 1)

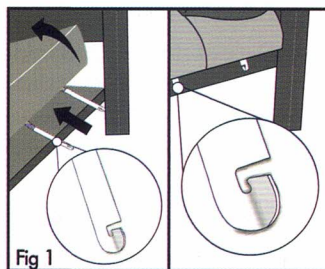


2. Carefully unfold your Good Night Brite™ so that it lies completely flat. Position it sideways (left to right) on bed, with curtain side facing down.

3. Attach rounded end of the tent into the 2 snap-in slots of the U-Shape Connector. Make sure it is securely locked in place before repeating this step for the other side. (See Fig 2).

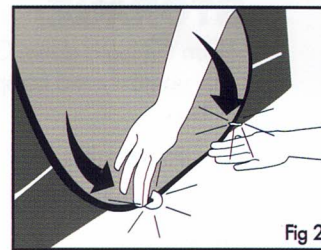


You're ready to play! See below (Fig 3) illustration of fully assembled Good Night Brite™.

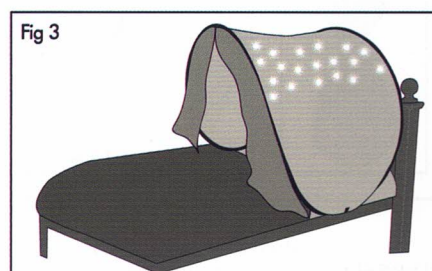

Battery insertion and replacement must be performed by an adult 18 years of age or older. Exercise caution to keep all battery compartment components away from children.

BATTERY INSERTION PRIOR TO FIRST USE:

- Carefully remove the battery compartment from the pouch. Be careful not to damage the secure wiring
- Un-clip the 2 plastic clasps to open the battery compartment
- Insert 3 x AA alkaline batteries OR rechargeable (nickel-cadmium) batteries into the battery compartment as per the marked polarities.
 - DO NOT use carbon zinc batteries.
 - DO NOT mix old and new batteries.
 - DO NOT mix alkaline and nickel cadmium batteries.
- Shut battery compartment and lock the two clasps
- Reinsert battery compartment into the pouch and seal the hook and loop fastener closed

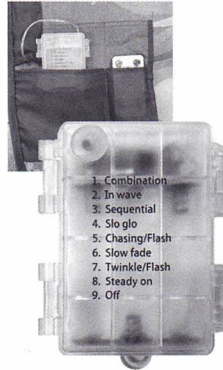

BATTERY REPLACEMENT FOR REMOTE CONTROL:

Step 1:
Squeeze the little black tab on the back bottom left of the remote towards the adjacent larger tab.

Step 2:
Slide out the battery tray and replace the exhausted battery with a fresh CR2025 3V button cell battery.




STORAGE:

When the fun is done, Good Night Brite™ folds up easily and compactly to store under the bed.

⚠ Disassembly must be performed by an adult over the age of 18.

⚠ Always turn off lights prior to storage.

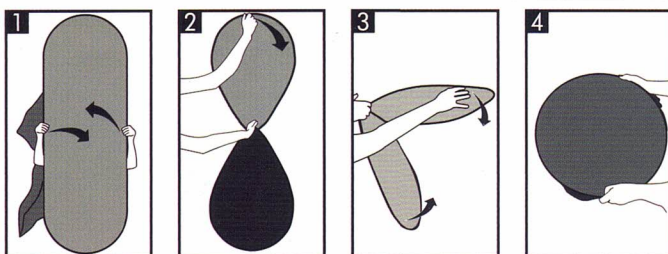

HOW TO USE REMOTE CONTROL:


Start by removing the plastic tab located on the bottom.

⚠ Warning: Contains button or coin cell battery. Hazardous if swallowed--see instructions.

This product contains a Button or Coin Cell Battery. A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

The twinkle zone features 8 different light modes; use the remote control to select one of the following modes:

- Combination
- In Wave
- Sequential
- Slo Glo
- Chasing / Flash
- Slow Fade
- Twinkle / Flash
- Steady On

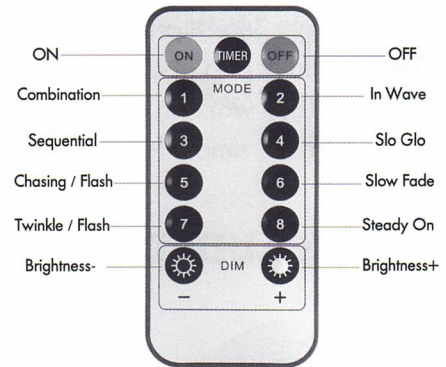

- Press ON button: Mode 1 will turn on.
- Press buttons 2 – 8 to change to a different mode.
- Press TIMER button to activate automatic shut-off after 1 hour.
- Press OFF button to manually turn off lights.
- Press DIM- / DIM+ to decrease / increase brightness of the lights.

WARNING: Not for children under 3 years.

DO NOT SUBMERGE THE LED LIGHTS, BATTERY COMPONENTS OR REMOTE CONTROL IN WATER.

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. The fabric may burn if left in continuous contact with any flame source.

Starting on one side of the bed, carefully remove Good Night Brite™ from the U-Shape Connector. Repeat for the opposite side. (See Fig 4)

- Grasp the tension rod in the center of each long side.
- Bring both sides together so Good Night Brite™ twists to form two "teardrop" shapes.
- Fold two sides together until they form a flat "circle" shape.
- Repeat steps 1 - 3 to fold into a smaller circle. Begin by grabbing the tension rod on opposite sides of the large circle.
- If any loose fabric is hanging out, tuck it in. Store under the bed until next time.

TENT CARE:

Spot clean only using mild soap and soft sponge, then allow the fabric to completely air dry. Avoid cleaning the twinkle zone. To prevent mold or mildew, do not store wet or damp.